


PEX-W2 [®]

GB

Operating Instructions

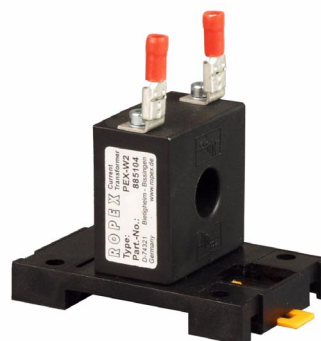

The current transformer supplied with the RESISTRON and CIRUS temperature controllers is an integral part of the control system.


The current transformer may only be operated if it is connected to the temperature controller correctly (see section "Startup and operation" and „Power supply“ of

the corresponding documentation of the temperature controller).



Only the original ROPEX PEX-W2 current transformer may be used. Other transformers may cause the equipment to malfunction.

Dimensions

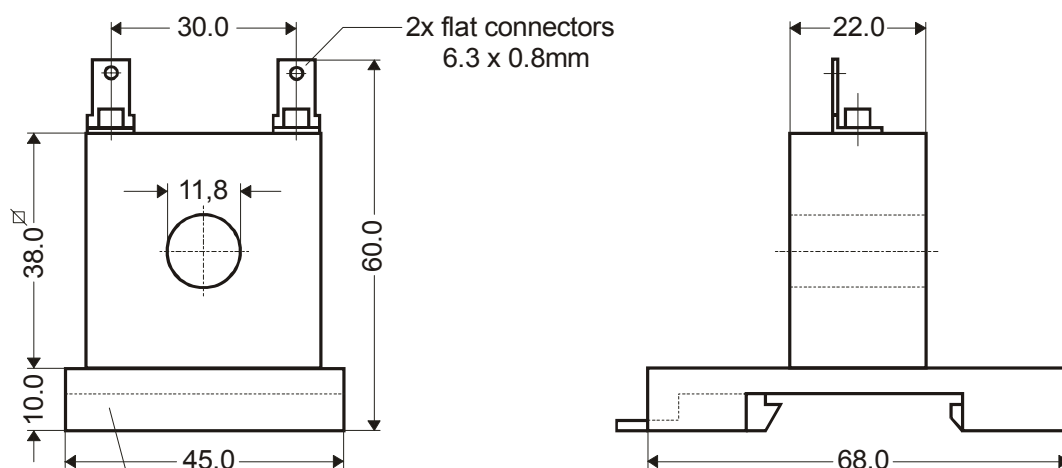

Snap-on plate for top hat rail (DIN TS35 rail), 35 x 7.5mm or 35 x 15mm, acc. DIN EN 50022

How to order



Current transformer PEX-W2

Art. No. 885104